


Operation Manual for the pump Controller

DC Skimmer Control

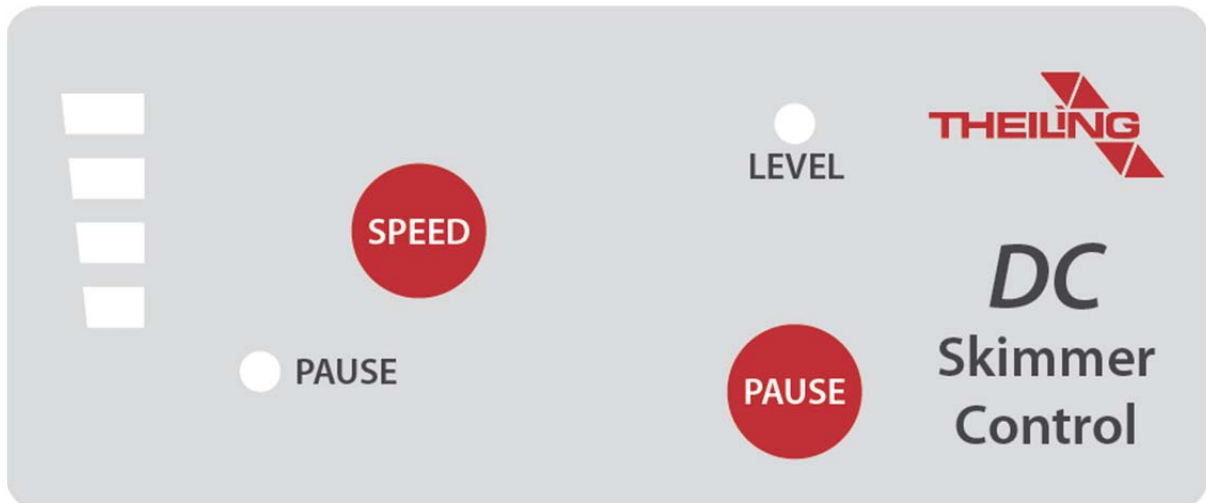

The pump controller DC Skimmer Control enables you to control the rotation speed of the venturi pump of the ECONE 3000 DC protein skimmer and adjust in this way the foam production.

The LEDs at the side show the rotation speed of the pump. If they are flashing, the unit is in the "Pause" mode (Feeding).

Operation:

1. Press the "Speed Button" This will increase the rotation speed. If all LEDs are lighted, the pump is operated with maximum speed. If you press Speed again, it will switch to the minimum speed and the pump runs with minimum Speed.
2. Pause. After pressing the „Pause“ Button, the pump is operated with minimum speed for 30 minutes. After this period, the unit switches automatically to the readjusted speed.

The Controller has no memory function. After a blackout the pump restarted with a middle speed.

Warranty:

Should any defect in material or workmanship be found within 12 months of the date of purchase, Theiling GmbH undertakes to repair or, at our option, replace the defective part free of charge – always provided the product has been installed correctly, is used for the purpose that was intended by us, is used in accordance with the operating instructions and

is returned to us carriage paid. The warranty term is not applicable on the all consumable products. Proof of Purchase is required by presentation of an original invoice or receipt indicating the dealer's name, the model number and date of purchase, or a Guarantee Card if appropriate. This warranty may not apply if any model or production number has been altered, deleted or removed, unauthorized persons or organisations have executed repairs, modifications or alterations, or damage is caused by accident, misuse or neglect. We regret we are unable to accept any liability for any consequential loss. Please note that the product is not defective under the terms of this warranty where the product, or any of its component parts, was not originally designed and / or manufactured for the market in which it is used. These statements do not affect your statutory rights as a customer. If your Theiling GmbH product does not appear to be working correctly or appears to be defective, please contact your dealer in the first instance. Before calling your dealer, please ensure you have read and understood the operating instructions. If you have any questions your dealer cannot answer, please contact us. Our policy is one of continual technical improvement and we reserve the right to modify and adjust the specification of our products without prior notification.

Theiling GmbH, Maschweg 49, D-49324 Melle, Germany

Technical changes reserved –04/2014